

BADLY

ULTRA COMPACT SIZE

yepp

YP-20T

SAMSUNG

MP3 music file playback
Real time clock
4-mode equalizer
32MB Built-In Flash memory
Data transfer with USB

Apple + PC
SAMSUNG DIGITAL SYSTEMS

SAMSUNG DIGITAL
SYSTEMS



Features

DIGITAL SOUND

yepp'



→ CD-quality sound.

What is MP3?

MP3 refers to MPEG1 LAYER3. MP3 is a music file made of audio data from compression technology with no degradation of the original sound.

What is yepp'?

“yepp’” is an advanced digital audio player which doesn’t need a cassette tape or CD. You can download MP3 files from the Internet or PC **Communications** and enjoy great **sound** any time, any place.

CONTENTS

Digital Sound- yepp'



PREPARING FOR USE

Checking Parts.....	4
Parts Description	5



LISTENING TO THE SAMPLE MUSIC

Listening to music through yepp'™	7
Searching the MP3 files at a faster speed	9
Changing the Time/Date.....	11
Setting the Mode.....	13
Using the Equalizer	15
Hold Function.....	16



SOFTWARE INSTALLATION AND OPERATION

Connecting yepp'™ to PC.....	19
Installing software on PC.....	21
Installing USB Driver	23
Installing software on Mac.....	25
Formatting flash memory (PC)	27
Listening to music on your PC.....	28
Sending files to yepp'™ PC.....	31

CONTENTS

Digital Sound- **yepp'**



CREATING AND DELETING MP3 FILES

Making MP3 files from an audio CD	33
Deleting files	35
Formatting flash memory (Mac)	36
Sending files to yepp' TM (Mac)	37
Deleting files	39



OTHERS

 
Safety Precautions	40
Troubleshooting	41
Security	42
Technical Specifications	43
Safety Information	44
Warranty	46

Checking Parts

Digital Sound- yeppr



yeppr
Player

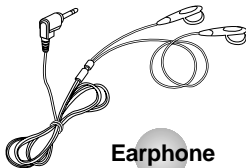

Earphone



 
yeppr Holder



**PC connecting
USB port cable**



**Software
Installation CD**



**AAA alkaline
battery(1.5V)**



**User's
Guide**

 
Parts Description

Front Panel

Reverse button
(Volume Down)

LCD

Mode button

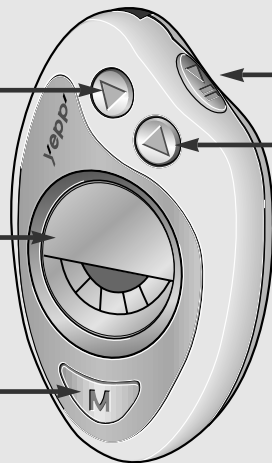


Play / Pause / Stop
button


Forward button
(Volume up)



 
Rear Panel

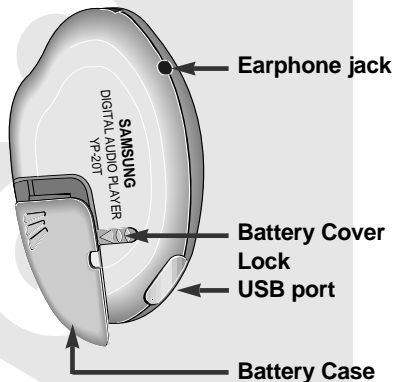

Battery Installation

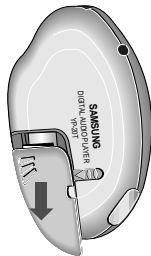 

 1 Remove the battery door pushing on the thumb recess in the direction of the arrow.

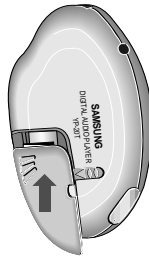


2 Insert the battery; paying attention to the orientation of the \oplus and \ominus ends of the battery. Replace the battery door.

Listening to music through yepp™



*Your yepp' contains a few sample MP3 files. Insert the Battery **in** the Battery compartment, and then connect the earphone correctly.*

 Turn on the Power

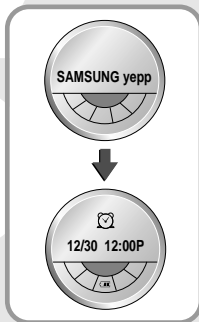

- 1 Insert the battery.



Playback

- 1 Press the  button on the front panel.
- 2 Press the  button to start playback.



- NOTE**
- Press the  button once more while the music that you selected is played back. Then,  appears on the display panel, and the sound is paused for a moment. Press the button again to resume playback.

Basic Function




Control Volume

- 1 Press the  button.
Control volume with the volume control button  /  .



NOTE Volume can be controlled from 0 to 20.
Press to move up or down by 1 step.
Press and hold to move continuously.

Stop Music

- 2 Press the Stop button  to stop playback.



NOTE Stop mode will automatically revert to clock mode **if** no buttons are pressed for 1 minute.

Searching the MP3 files at a faster speed

Press the ◀ and ▶ buttons to move to the next track.

Reverse button Forward button



1 To search within a song being played back:

- Press and hold the ▶ button while a song is being played back to fast forward. Release the button to resume playback.

 


NOTE Press and hold the ◀ button while a song is played back to move quickly backward.




2 To skip to the next song while a song is being played:

- Press the button to move one track forward.

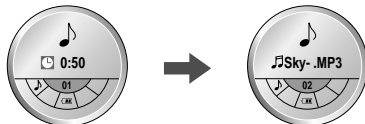

3 To search a song in stop mode:

 
- Press the button to move one track forward.
To play back the song that you had chosen, press the Play button ().
- Press the button to move one track backward.

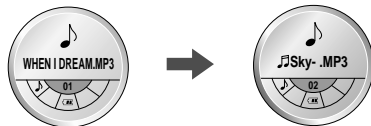

NOTE If the button is pressed before the first five seconds of the track has played, the previous song will be played back. If the button is pressed after five seconds has played, the current song will be played back.

Changing the Time/Date

To check the Time/Date

- 1 The time appears when the battery is installed.
- 2 If no buttons are pressed when in the MP3 Mode for one minute, the system reverts to Clock Mode.
- 3 If the  button is **pressed** in the MP3 Mode, the system reverts to Clock Mode.
- 4 Press the (◀ / ▶) buttons in the clock **Mode**. The Date appears for a short time.







 
NOTE • The battery will last approximately 30 days if the unit is left in clock mode.







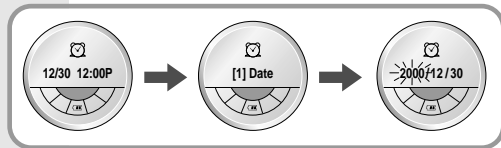

Basic Function


To Change Date/Time

 
- 1 Press and hold the () button long in the clock Mode, The mode will be changed to the [1] Date, [2] Time Set up mode.
- 2 First, the [1] Date will be shown.
Using the ( / ) buttons, move to Set up () mode.



- NOTE** • When selecting DATE - The year blinks first. Adjust using the ( / ) buttons, then use the () button to set the year.
- When selecting TIME - The AM/PM selection blinks first. Adjust by using the ( / ) buttons, then use the () button to set the time.

Setting the Mode



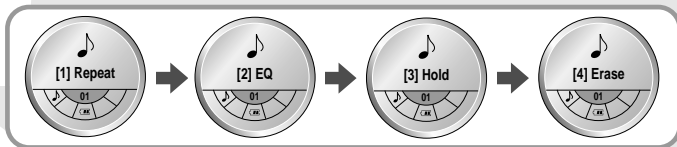



I Each time the  button is pressed and held in the MP3 mode, the modes will be changed in the order of [1] Repeat → [2] EQ → [3] Hold → [4] Erase

 


- Repeat mode: Repeats current track.
- EQ mode : To use the Equalizer.
- Hold mode : No buttons on the yepp work.
- Erase mode : Erase the file. (You can only erase files in the Stop mode.)




Repeat Mode


- 1 Press and hold the  button in the MP3 Mode to change to set-up mode.
Press the   button to **enter** [1] REPEAT **mode**, then press  button.
- 2 Press the  button to choose between REPEAT → REPEAT ALL → SHUFFLE → INTRO → NORMAL modes, then save it with the  button.

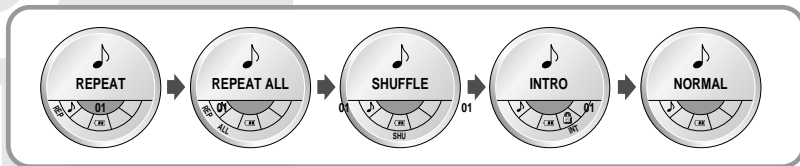




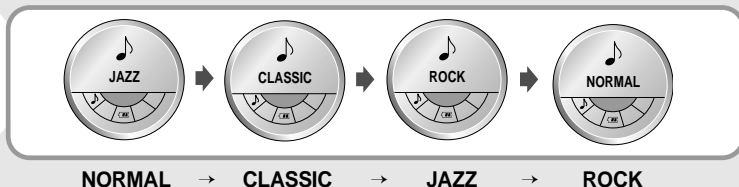 
- REPEAT Mode : Repeats current track.
- REPEAT All Mode : Repeats all the tracks.
- SHUFFLE Mode: Enables random playback.
- INTRO Mode: Enables you to repeat the first 10 seconds of the tracks saved.
- NORMAL Mode: Normal playback.


Using the Equalizer

1 Each time the  button is pressed, the modes will be changed in the order of *Jazz*, *Classic*, *Rock* and *Normal*.





 
Press the  /  button to choose EQ mode then  press button.

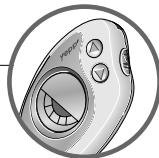2 Press the  /  button to **cycle through** NORMAL → CLASSIC → JAZZ → ROCK modes, then s
with the  button.






Hold Function






- 1 Press and hold the  button in the MP3 mode. Press the  /  buttons to **enter** [3]
Hold **mode**, then press  button.
- 2 When "HOLD ON?" appears on the **display**, press  button.

 


NOTE

- Buttons will be inoperable. Each time a button is pressed, "Hold" will appear and then be cleared from the panel.
- Press and hold the  **button** to cancel "HOLD".

Erase Mode

- 1 Select a track to be erased.
- 2 Press and hold the  button in the MP3 Mode to change to setup mode.
Press the  /  button to select Erase, then press the  button.
The message "ERASE?" will appear, then press the  button.

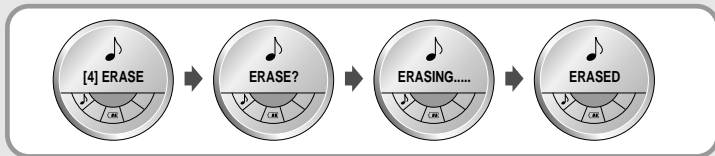

- NOTE**
- After erasing a track, the next track will be shown on the display.
 - Erasing is **not** possible in the play mode.



Turning off the power.

- When the Time mode comes on, it means your yepp' is turned Off. Your yepp' battery can last for about 30 days in Time mode without button operation. Please take the battery out when the player will not be used for awhile.

 
Connecting yeppTM to your PC or Mac

Minimum PC System Requirements.

- Pentium 133 MHz
- Windows 98/ME/2000
- 20MB Free Hard Disk Space
- CD-ROM Drive
(Optimum: 8X and more)
- Built-in USB Port
- Mac OS 8.6~9.0.4

- 1** Connect the USB cable to the USB port of the computer.
- 2** Turn the player on and connect the other end of the cable to the download connector.

- NOTE** ● Be sure to install the yeppTM Audio Manager for the PC and Yepp Explorer for the Mac before connecting your yeppTM to your PC or Mac. When the message "Add new hardware wizard" appears on the screen, click [Cancel] and then install the yepp Audio Manager.
- If the USB driver is not installed automatically, refer to page 23 (PC only).

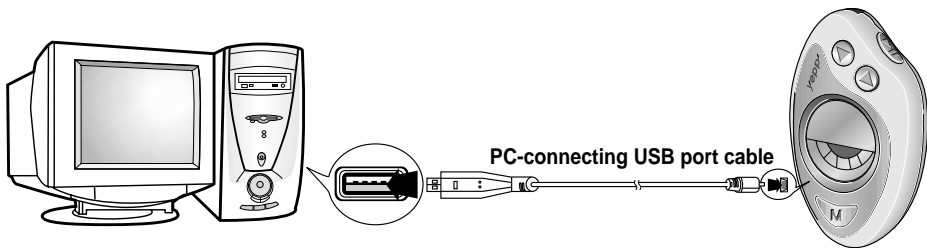


- Warning : Please use the PC-connecting USB port cable which was provided in the box.

Installing Software on PC

Insert the Installation CD into the CD-ROM drive. The picture to the right appears when inserting the CD.

 This software lets ...
you listen to MP3
music on your
computer digitally
and enables you to
encode your CDs
into MP3 Files.

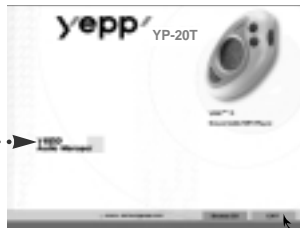

1 Click



2 Click the Next button on each successive window.

Install the other program or **download files** depending on your requirements.

 
yepp'

Installing the USB Driver

After the software is installed, connect a USB cable to the PC. Then, the USB driver is automatically installed. If the driver is not automatically installed and the message “Add New Hardware Wizard” appears on the screen, proceed as follows:

1 When using Windows98


- Click the Next button on each successive window.

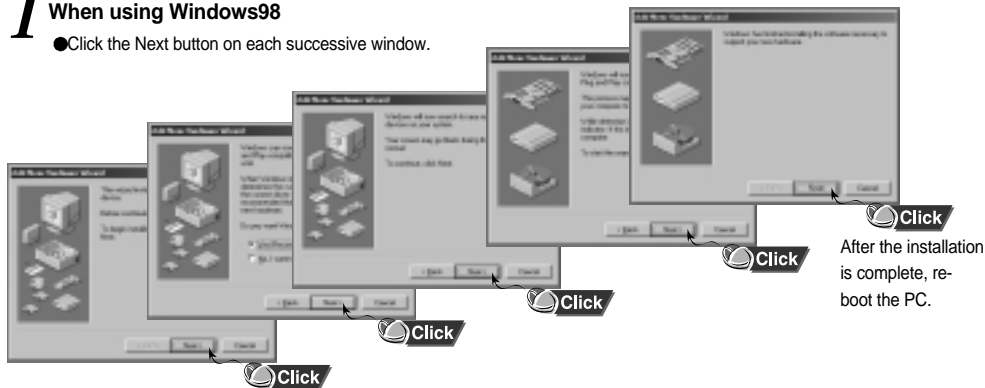




2 When using Windows2000

 - Click the Next button on each successive window.

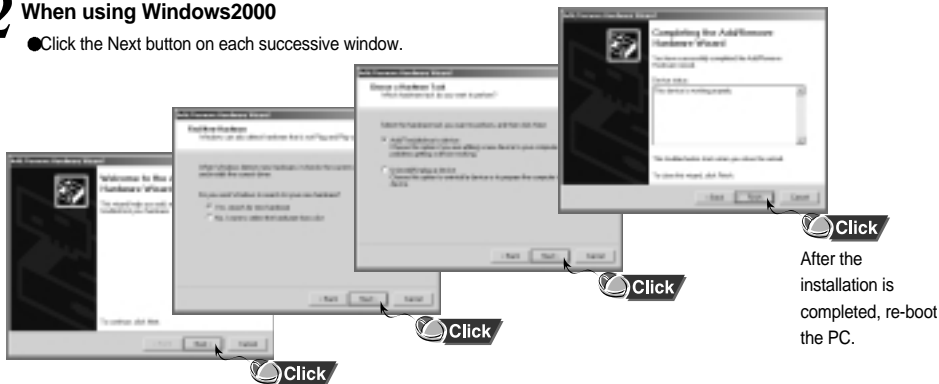

Installing Software on Mac

 Insert the Installation CD into the CD-ROM drive. The picture to the right appears when inserting the CD.

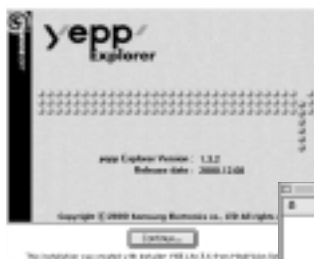

1 Execute the yepp™ Explorer.

- Double-click the yepp™ Explorer icon.



NOTE ● MusicMatch Jukebox software is used for the Mac. [Download software from www.](#)



2 Click the button on each successive window.



▼ yeppTM Explorer Folder



 
Execute the
yeppTM Explorer.



After all installations are
completed, the yepp
explorer folder is created.

Formatting flash memory(PC)

Digital Sound- **yepp'**

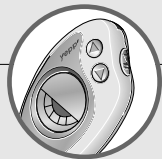

1 Execute the yepp Audio Manager.

- Double-click the yepp Audio Manager icon on the desktop.



2 Click on [Copy to devices].



3 Click on [Format Media].

- After format is complete, the Create New Folder window appears. Input the Folder Name and click [OK].



NOTE ● You can also format the flash memory by pressing the right button on the mouse and selecting Remove.

Warning ● Formatting Flash memory will delete all existing files.

Listening to music on your PC

Digital Sound- yepp'



Click [make a playlist]. Select a title from the [File], [Add Tracks] and add to the [Select Tracks From Database].

PC

- 1** Click on [Make a Playlist].
- Double-click the yepp Audio Manager icon on the desktop.

- 2** Click on [Select Tracks From Database].



- 3** Select the track you'd like to listen to from the list.
- Check the selection box.



- 4** The track is added on the playlist when you click [ok].

- 5** Click [Play].



NOTE ● [Select Tracks From Database]:the file list is saved on your PC.

Listening to music on your PC

When you want to listen to a folder of tracks stored on your PC

- 1** Click on [Select Playlists From Database].



- 2** Select the folder that contains the track or tracks you want to hear.

● Check the selection box.



- ①** Click [OK].

all the tracks in the folder are added on to the playlist.



- ②** Click [Edit].

Click "OK" after selecting only the tracks you want from the folder, only those tracks selected are added on to the playlist.



NOTE ● [Select Playlists From Database] (the folder in your PC containing music files).



Listening to a CD

- 3** Select a track from the playlist and click [play].



- 1** Click on [Make a Playlist].

- 2** Click on [Get Tracks From CD].

- The songs on the CD are added to the play list.



- 3** Select a track from the playlist and then click [Play].



Sending Files to yepp™ from your PC

1 Click on [Copy to Devices].



 
2 Select the file you would like to send to your yepp™.

- ① Click on [Select Tracks From Database] to select the file to be transferred.
- ② Click on [Select Playlists From Database] to select a folder and press [OK] (to select all the tracks in the folder) or [Edit] (to select only certain tracks in the folder).


NOTE ● Refer to page 27 if you'd like to add a track to the [Playlist].
● Only files that are saved on the PC are transferable.



3 Click on [Copy to Portable].

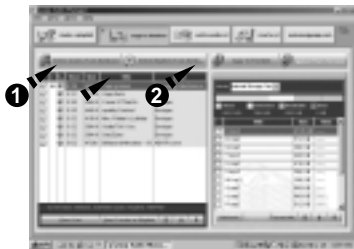

 The selected file has been saved.
Now you can listen to music with yepp'TM after removing the USB cable.

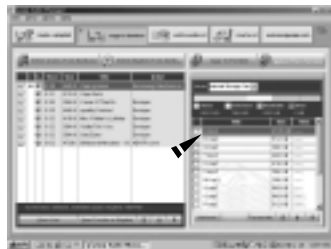


NOTE ● The yepp'TM uses around 1MB of memory for each minute of music.

Making MP3 files from an audio CD

1 Execute yepp audio manager.

 - Double-click the yepp audio manager icon on the desktop.

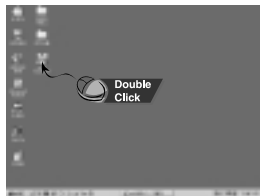

2 Click on [Read CD].



3 Select [Get Tracks Title].

- This displays the track information.



Warning ● Making MP3 files from a CD is limited to 50 tracks. Please refer to "Upgrade Online" from [help topics]

 


4 Click on [Start Reading].

- The Audio CD contents are converted into MP3 files.



- 1 [Write audio CD]
-Record the music files on your PC to a CD.

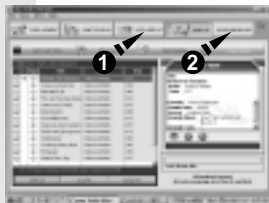

- 2 [Samsungyepp.com]
-You are taken to the yepp homepage.

 


NOTE

- This function is **limited** to 25 tracks. Please refer to "write a custom CD" from [help topics]


Deleting files

Digital Sound- yepp'

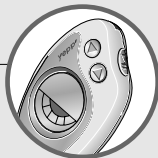

On PC

 1 Click the file you would like to delete.

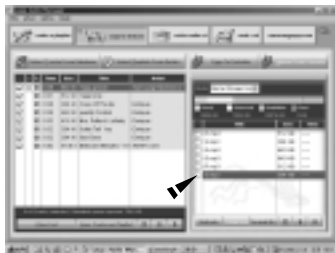

2 Click on trash icon.



Note

● You can also delete the file by pressing the right button on the mouse and selecting **Delete**.

 
Formatting flash memory(Mac)

Digital Sound- yepp'



1 Execute the yepp'™ Explorer.

- Double-click the yepp'™ Explorer icon in the HDD.

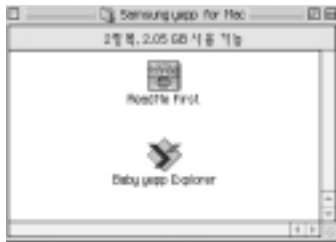

2 Click [File], [Format] and select [Flash Memory].



Warning ● Formatting Flash memory will delete all existing files.

Sending Files to yepp'TM (Mac)

Before sending files to your yepp'TM, connect the yepp'TM to your Mac and click Refresh ([file]) on the yepp'TM Explorer.

1 Execute the yepp'TM Explorer

 
- Double-click the yepp'TM Explorer icon in the HDD.




2 Click [file] [Refresh] on the yepp'TM Explorer.



3 Click[Copy to] and [Flash Memory].

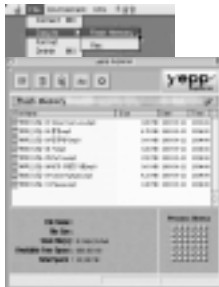

 4 Select the file you would like to send to your yepp'™

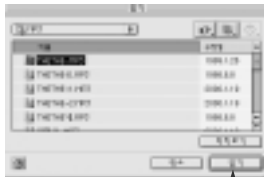

5 Click [Open].

 
The selected file has been saved.
Now you can listen to music with yepp'™ after removing the USB cable.



NOTE ● The yepp'™ uses around 1MB of memory for each minute of music.

Deleting files

Digital Sound- yepp'

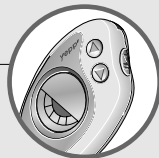

Connect your yepp'TM to Mac and execute the yepp'TM Explorer before deleting.

On Mac

- 1 Click the file you would like to delete.
- 2 Click [File] and select [Delete].



NOTE You can also delete the file by pressing the right button on the mouse and selecting Delete.

Safety Precautions

Digital Sound- yepp'



Do not drop your player or leave it under heavy objects.

Do not allow any liquids to contact the player.

 
- If this happens, wipe the player with dry cloth and call a Samsung Electronics service center.
-

Avoid areas of high humidity, strong magnetic fields, or sources of heat when storing your player.

**Do not use thinner, alcohol, or benzene when cleaning the player.
It may damage the player.**

Troubleshooting

Digital Sound- yeppr

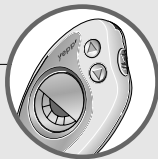

The software does not work properly.

- Refer to page 19, setting up Environment.


The message “BAD SONG” appears.

- This message appears when the file does not meet the MP3 format.

The player does not work or nothing is displayed on the LCD.

- Check the capacity of the battery.
One 1.5V AAA size battery is required.
- Check the polarity(+ and -) of the battery.

The buttons are not working.

- Press and hold the  button to check the Hold mode. While in the Hold mode, the buttons do not work

There is no audio produced when the button is pressed in MP3 mode.

- Check that MP3 files are stored in the built-in memory

MP3 files cannot be downloaded.

- Check and/or replace the batteries.
- Check the connection between the USB port of your PC and the USB cable.

Security

Digital Sound- yepp'



You can get legal MP3 files from a growing number of internet sites. Here are some sites which provide MP3 files.

What is SecuMax?

With the increasing amount of digital multimedia content, the content providers became concerned with the ease in which the content could be copied and distributed in violation of their copyrights. This matter required a system for protecting copyrighted music and for using legal content conveniently.

- SecuMAX protects the copyrighted music against infringement.
- SecuMAX can be adapted to various types of digital contents.

For further details on SecuMAX, please visit www.samsungyepp.com

NOTE To listen to MP3 files encoded with SecuMAX, you must download the key file from the internet and register it on the yepp'™ Audio Manager.

 
Internet Site

- www.cdcb.com
- Rio and MusicMatch is either a registered trademark or trademark of Real Networks Inc. in the United States and/or other countries
- Music CD-related data is provided through the internet from the CDDB™ Music CD Database. Copyright c 1998 CDDB Inc. All rights reserved.



Technical Specifications

Digital Sound- **yepp'**

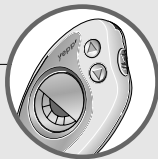

Model	YP-20T
Processor	12MHz, 16bit CISC
Memory Capacity	Built-in Memory 32 MB
Power	1.5V
Battery	ONE AAA-size/4-hr or longer playing time(with alkaline battery)
Dimensions(W x H x D)	42 x 70 x 22.1 mm / 32g, 1.7" x 2.7" x 0.9" / 1.13 oz(without battery)
Case	Plastic
File Transmission Speed	2.4Mbps at least
Noise Ratio	85dB
Earphone Output Power	5mW
Output Frequency Range	20Hz-20KHz

Safety Information

Digital Sound- yepp'



FCC Part 15: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, this notice is not a guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the distance between the equipment and receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician.

Modifications

- Any changes or modifications not expressly approved by the grantee of this device could void the user's authority to operate the device.

 
Compliance

- This product conforms to the following Council Directive:

- Directive 89/336/EEC, 92/31/EEC (EMC)

Declaration of Conformity

- Name: Samsung Electronics Co., Ltd
- Address: 416, Maetan-3Dong, Paldal-Gu, Suwon City, Kyungki-Do, Korea 442-742
- declares under its sole responsibility that the product
- Trade Name: Samsung Electronics Co., Ltd
- Model Number: YP-20T
- has been tested according to the FCC/CISPR22/95 requirements for Class B devices and found compliant with the following standards

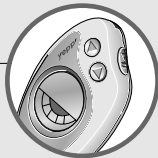

EMI/EMC : AnSI C63.4 1992, FCC Part 15 Subpart B

This device complies with part 15 of the FCC Rules.

operation is subject to the following two conditions:

1. This device may not cause harmful interference, and
2. This device must accept any interference received, including interference that may cause undesirable operation.

Responsible Party for Product Compliance:

Samsung Electronics America

QA Lab.

85 West Tasman Dr.

San Jose, CA 95134

Tel: 408-544-5124

Warranty

Digital Sound- yepp'



Samsung warrants this product as free of defects in material, design and workmanship for the period of twelve(12) months from the original date of purchase.

If during the period of warranty this product proves defective under normal use and service you should return the product to the retailer from whom it was originally purchased. The liability of Samsung and its appointed maintenance company is limited to the cost of repair and/or replacement of the unit under warranty. Return of the product for defective reasons should be to the original purchaser, however Samsung Authorized Dealers and Authorized Service Centers will comply with the warranty on the terms issued to purchasers in the country concerned, for further information relating to the Authorized Service Centers contact.

1-800-SAMSUNG (1-800-726-7864)
www.samsungyepp.com

WARRANTY CONDITIONS:

1. The warranty is only valid when the warranty card is properly completed, and upon presentation of the proof of purchase consisting of original invoice or sales slip confirmation, indicating the date of purchase, dealers name, model, serial No. and product number. Samsung reserves the right to refuse warranty service if this information has been removed or changed after the original purchase of the product from the dealer.
2. Samsung's obligations are to the repair of the defective part, and at its discretion, replacement of the product(service exchange unit)
3. Warranty repairs must be carried out by an Authorized Samsung Dealer/Service Center. No reimbursement will be made for repairs carried out by non Samsung Centers and warranty coverage will not be valid for repairs or damage caused by such repairs.
4. Repair or replacement under the terms of this warranty does not give right to extension to or a new starting of the

period of warranty. Repair or direct replacement under the terms of this warranty may be fulfilled with functionally equivalent service exchange units.

5. The warranty is not applicable in cases other than defects in material, design and workmanship. The warranty does not cover the following:

- ◆ Periodic checks, maintenance, repair and replacement of parts due to normal wear and tear.
- ◆ Abuse or misuse, including but not solely limited to the failure to use this product for its normal purposed or in accordance with Samsung's instructions usage and maintenance.
- ◆ The product has been used in conjunction with accessories not approved by Samsung for use with this product.
- ◆ Failure of the product arising from incorrect installation or use not consistent with technical or safety standards in current force, or failure to comply with product manual instructions.
- ◆ Accidents, Acts of God or any cause beyond the control of Samsung caused by lightning, water, fire, public

disturbances and improper ventilation.

- ◆ Un-authorized modifications carried out for the product to comply with local or national technical standards in countries for which the Samsung product was not originally designed.
- ◆ Repairs performed by non-authorized service centers such as opening of the product by a non-authorized person.
- ◆ The model, serial No. and product number on the product **have** been altered, deleted, removed or made illegible.

6. This warranty does not affect the consumers statutory rights nor the consumers rights against the dealer from their purchase/sales agreement.



THERE ARE NO EXPRESS WARRANTIES OTHER THAN THOSE LISTED AND DESCRIBED ABOVE, AND NO WARRANTIES WHETHER EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, SHALL APPLY AFTER THE EXPRESS WARRANTY PERIODS STATED ABOVE, AND NO OTHER EXPRESS WARRANTY OR GUARANTY GIVEN BY ANY PERSON, FIRM OR CORPORATION WITH RESPECT TO THIS PRODUCT SHALL BE BINDING ON SAMSUNG, SAMSUNG SHALL NOT BE LIABLE FOR LOSS OF REVENUE OR PROFITS, FAILURE TO REALIZE SAVINGS OR OTHER BENEFITS, OR ANY OTHER SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES CAUSED BY THE USE, MISUSE OR INABILITY TO USE THIS PRODUCT, REGARDLESS OF THE LEGAL THEORY ON WHICH THE CLAIM IS BASED, AND EVEN IF SAMSUNG HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. NOR SHALL RECOVERY OF ANY KIND AGAINST SAMSUNG BE GREATER IN AMOUNT THAN THE PURCHASE PRICE OF THE PRODUCT SOLD BY SAMSUNG AND CAUSING THE ALLEGED DAMAGE. WITHOUT LIMITING THE FOREGOING, PURCHASER ASSUMES ALL RISK AND LIABILITY FOR LOSS, DAMAGE OR INJURY TO PURCHASER

AND PURCHASER'S PROPERTY AND TO OTHERS AND THEIR PROPERTY ARISING OUT OF THE USE, MISUSE OR INABILITY TO USE THIS PRODUCT SOLD BY SAMSUNG NOT CAUSED DIRECTLY BY THE NEGLIGENCE OF SAMSUNG. THIS LIMITED WARRANTY SHALL NOT EXTEND TO ANYONE OTHER THAN THE ORIGINAL PURCHASER OF THIS PRODUCT, IS NONTRANSFERABLE AND STATES YOUR EXCLUSIVE REMEDY. Some states do not allow limitations on how long an implied warranty lasts, or the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state. This product is for personal use only, and is only for use in compliance with the limitations of copyright and other laws. To obtain warranty service, please contact SAMSUNG at:
 Samsung Electronics Amerca, Inc.
 400 Valley Road, Suite 201 Mount Arlington, NJ 07856
 Tel: (973) 601-6000, Fax: (973) 604-6001
 1-800-SAMSUNG (1-800-726-7864)
 www.samsungyepp.com
 081299

MEMO

Digital Sound- **yepp'**



Samsung Electronics American inc.
105 Challenger Road, **Ridgefield** Park, N.J. 07660

SERVICE DIVISION
TEL: 1-800-SAMSUNG (1-800-726-7864)



Digital Audio Player

www.samsungyepp.com

AH68-00830A